

LOKSET[®] ADVANCE

HARD ROCK MINING – WEST COAST LONG LIFE RESIN CAPSULE

DESCRIPTION

The Lokset[®] Advance resin capsules allow efficiency improvements with an extended shelf life of 12 months at 25°C reducing storage, waste and disposal.

The Lokset Advance resin capsule consists of a reinforced, thixotropic polyester resin mastic in one compartment and an organic peroxide catalyst separated by a physical barrier in the other. The rotation of the bolt during installation ruptures the capsule, shreds the skin and mixes the two components causing a chemical reaction and transforming the resin mastic into a solid anchor

APPLICATION AND USES

The Lokset Advance resin capsule is used as an anchoring support in strata especially where long tendon support is required.

Other uses include:

- ▶ Marine fixings above or below water
- ▶ Ground anchors in rock
- ▶ Fixtures to building structures
- ▶ Pipe and cable support fixings
- ▶ Crane and rail track fixing
- ▶ Anchoring bolts for machinery

ADVANTAGES

Improved Product Performance

- ▶ Extended shelf life of 12 months at 25°C reducing storage, waste and disposal
- ▶ High compressive strength allows strong, rapid and consistent anchorage
- ▶ Unaffected by vibration
- ▶ No expansion stresses and can be used in weak strata



Figure 1 - Resin Capsule

Productivity Gain

- ▶ Rapid and easy to install with no specialty injection equipment
- ▶ High load transfers achieved almost immediately
- ▶ Lower viscosity and improved rheology allow easier push through of resin
- ▶ Can be supplied in spin and hold or spin to stall configuration.

Operating Environment

- ▶ Protects bolt from corrosion, can be used in wet or underwater conditions

Efficiency Improvements

- ▶ One resin for roof and rib support (sidewalls)
- ▶ Increased resin quantity per pallet
- ▶ Improved lifting ergonomics
- ▶ Reduced waste and disposal
- ▶ Improved resin rheology allows for use in smaller boreholes reducing amount of resin required

TECHNICAL DATA

Typical insertion properties at 25°C are as follows:

Speed	Spin Time ¹	Hold Time ²	Capsule Colour	Label Colour
Super Fast	8 sec	>4 sec	Yellow	White
X Fast	8 sec	>4 sec	Yellow	Orange
Fast	10 sec	>4 sec	Yellow	Yellow
Medium	15 sec	>4 sec	Red	Red
Slow	20 sec	>70 sec	Blue	Blue

¹ Approximate spin time in seconds

² Minimum hold time in seconds

The hold time is the minimum time allowed after completion of the spin time before bolt tensioning is attempted. In many cases the hold time will be greater than that listed.

The times listed are an indication only, they may vary with temperature, mining conditions, equipment, hole: bolt annulus, age and storage conditions of resin capsules.

Each mine site should be evaluated to determine optimum installation parameters. For further information on capsule types, size and speed consult us.

Temperature / Mastic Gel Time

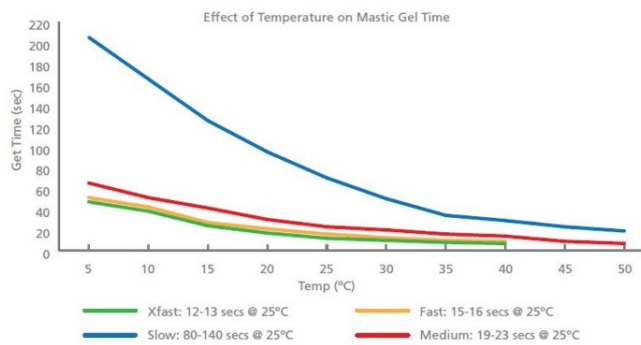


Figure 2 - Effect of Temperature on Mastic Gel Time

Compressive Strength

Tested in accordance with 1BS 7861:Part 1:1996. Tested on 40 mm cubes with slow set resin.

¹ Strata reinforcement support system components used in coal mines: Part 1, specification for rock bolting.

Typical results:

Age (hours)	Uniaxial compressive Strength (MPa)
24	>60

Young Modulus

Tested on 2:1 aspect ratio cylinder with slow set resin.

Typical results:

Age (hours)	Young modulus (GPa)
24	>6.5

Push Out Test

Measured on 22 mm bolt, 50 mm encapsulation in 28 mm I.D. threaded cylinder, with slow set resin.

Typical results:

Age (hours)	Push Out force (kN)
24	>72

Punched Shear Strength

This test (according to BS 2782 Part 3) provides excellent correlation with mine pull out tests (without the variances) and is directly related to the strength of the resin. With fast setting resins the test can be performed in a very short time after the resin mixture has gelled (15 seconds).

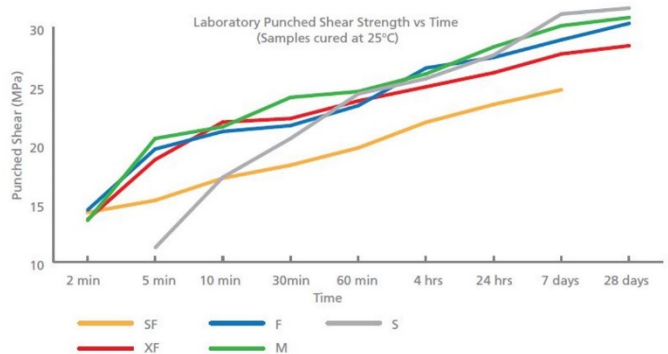


Figure 3 - Laboratory Punched Shear Strength vs Time

APPLICATION METHOD

It is essential that good bolting procedures are followed and the instructions on the box are observed. As a guide the following steps must be taken:

- 1) Drill hole to correct diameter ensuring water/air flush is used. The hole should be clean and free from dust and other loose particles. In Coal mining 27-28 mm hole diameters are normally preferred with 22 mm core diameter roof bolts or cables. Do not exceed the manufacturers recommended diameter.
- 2) Drill hole to correct length for bolt. The ideal hole length should be at least 100 mm shorter than the bolt, dependent on the bolt/cable being used. Do not deviate from the manufacturers recommended length of hole in relation to the bolt.
- 3) Select the correct resin capsule(s) that has been specified for the job
- 4) Check that the use by date on the box label has not expired.
- 5) When pre-tensioning and when the Fast (or Medium) and Slow capsules are used together follow the below steps:

Step 1	<i>Insert the fast or medium capsule first</i>
	<i>Yellow end first : Fast</i>
	<i>Red end first : Medium</i>
Step 2	<i>Insert the slow capsule second</i>
	<i>Green end second :Slow</i>
Step 3	<i>Push the capsule(s) until the first capsule touches the top of the hole using the bolt (or other insertion device if available).</i>
	<i>Ensure the capsule reaches the top of the hole.</i>

Should insertion problems occur then the problem must be investigated.

- 6) Connect the bolt to the spinning dolly/spanner.
- 7) The bolt is pushed and spun at maximum rpm at a constant feed rate through the entire length of the capsule(s), when the top of the hole is reached a further 2 - 4 seconds spinning will suffice to ensure complete mixing. Total spin time through the capsule and at the top of the hole should not exceed the "approximate spin time" on the box label. It is essential the bolt is pushed and spun to the top of the hole before mixing is completed.

- 8) Do not over mix the resin. If mixing continues beyond the recommended spin time and into the gel time, the solidifying chemical may be ground up and destroyed.
- 9) The bolt is then held stationary and after the hold time has elapsed the bolt may be tensioned as required.
The hold time is the minimum time allowed after completion of the spin time before bolt tensioning can be attempted. In many cases the hold time will be greater than that listed.
- 10) The following items must also be checked where hand-held (air operated) equipment is utilised:
 - ▶ Clean and dry supply of compressed air
 - ▶ Air supply from roof bolter to miner should not be more than 100 metres of 2" hose
 - ▶ Air pressure must be between 85 - 100 psi (586 - 690 KPa) when bolter(s) are operating
 - ▶ Water pressure should be between 80-90 psi (550 - 620 KPa) and hoses flushed out prior to connection

SAFETY INSTRUCTIONS AND LIMITATIONS

The annular gap between bolt and hole diameter should be at a minimum. It is recommended the annular gap be between 4 - 6 mm e.g.

Bolt Diameter	22mm
Hole Diameter	27mm
Annular Gap	5mm

Where larger annular gaps are encountered (e.g. in Hardrock mines) the bolt must possess larger deforms or a mixing device (e.g. Paddles). Follow the installation guidelines. Larger hole diameters/annular gaps may result in extended cure times, less efficient mixing, finger gloving of the bolt into the resin capsule, a reduction in load transfer (strength), a reduction in encapsulation length.

In all cases it is strongly recommended that short encapsulation pull tests be performed to verify that required load strengths are achieved.

Extended tensioning times may be due to:

- ▶ Low temperatures
- ▶ Broken ground
- ▶ Large hole diameters
- ▶ Insufficient spinning
- ▶ High nut break out loads

- ▶ High machine torque load levels
- ▶ Excessive thrust/feed on the installation rig
- ▶ Intermixing of slower setting resin into faster setting resin capsules.

The resin appearing to be "too quick" with the bolt not reaching the top of the hole may be due to:

- ▶ High temperatures
- ▶ Smaller diameter holes
- ▶ Hole closure
- ▶ Angled holes
- ▶ Misaligned holes/rigs
- ▶ Low feed pressure
- ▶ Premature nut break out
- ▶ Old/out of date resin

All bolting parameters will vary depending on several factors such as:

- ▶ Strata condition/type
- ▶ Temperature
- ▶ Hole: bolt annulus
- ▶ Age of resin capsule
- ▶ Equipment
- ▶ Installation method

Volume

It is essential the correct length of capsule is selected to fill the volume left in the hole after allowing for the volume of the bolt.

It is good practice to use a capsule size which exceeds this volume by around 10% to allow for variations in hole diameter and length, bolt size and strata conditions.

25 mm nominal diameter capsule with 22 mm core diameter bolt
Theoretical encapsulation + 10%

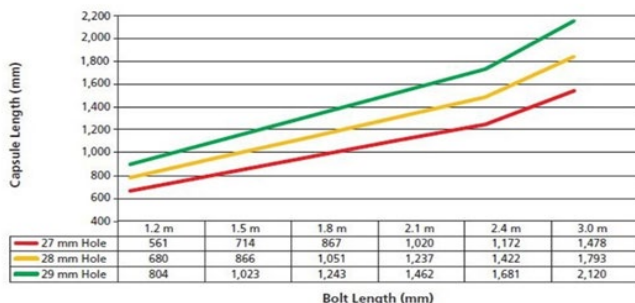


Figure 4 - Theoretical Encapsulation + 10%

PACKAGING AND TRANSPORTATION

Lokset Advance Resin Capsules are available in standard diameters of 20 mm, nominal 25 mm (actual 23.6 mm), 26 mm, 30 mm, 36 mm and 38 mm. Lengths range from 300 mm to 1700 mm.

Resin capsules are packaged in water resistance cardboard cartons labelled with colour codes and supplied on wooden pallets. Capsules are packed according to their length and in quantities relative to the capsule size.

Label colour is dependent on resin speed and resin combination:

Resin Speed	Colour of Label
Super Fast	White diamond
Extra Fast	Yellow diamond
Fast	Light yellow diamond
Medium	Red diamond
Slow	Blue diamond

Example of capsule label: Lokset Advance Toospeedie Fast Slow.

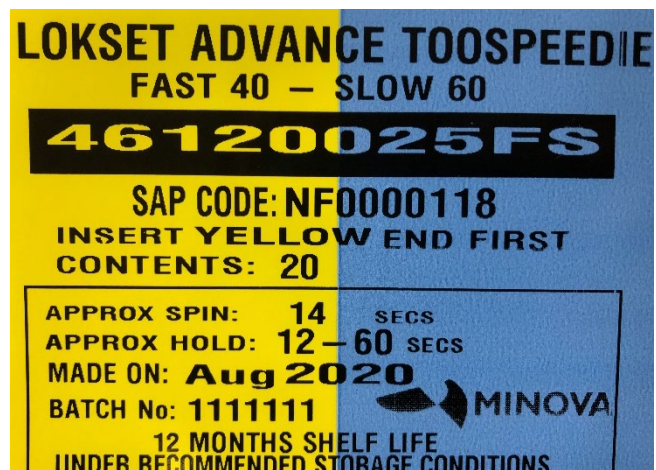


Figure 5 - Capsule Label

STORAGE AND SHELF LIFE

Suggested shelf life for Lokset Advance resin capsule is 12 months when stored between 20- 25°C. Storage at lower temperatures such as in cool rooms is highly recommended and will extend the shelf life when stored at 0-5°C. Stock rotation is strongly recommended. Storage at higher temperatures may reduce shelf life.

STORAGE CONDITIONS

Store in a cool, dry place away from direct sunlight. Do not double stack pallets. When using cool room storage, the resin capsules should be allowed time to attain ambient temperature before use otherwise SPIN and HOLD TIMES will be extended.

HEALTH AND SAFETY

For further information see the Lokset Safety data sheet on www.minovaglobal.com/apac

TECHNICAL SUPPORT

We provide technical advisory service by a team of specialists in the field. The service includes on site assistance and advice on evaluation trials and laboratory work.

Packed in water resistant cardboard cartons labelled with colour codes and supplied on wooden pallets.

QUALITY

The superior quality of the Lokset resin capsule is assured through a four-part quality control program:

- 1) Raw Material Testing
- 2) In-process quality control testing
- 3) Finished product acceptance testing
- 4) Quality system management to ISO 9001

Testing levels and specifications for each of the above programs have been established statistically, based on actual historical data to ensure the customer receives a uniform quality product which will perform dependably under field conditions.

MANUFACTURER

Minova trading name of Orica Australia Pty Ltd
George Booth Drive
Kurri Kurri NSW 2327 AUSTRALIA

An ISO 9001: 2015 Quality Management Certificated Company



CUSTOMER SERVICE & SUPPORT

Product & Technical

Minova Australia
George Booth Drive
Kurri Kurri NSW 2327 AUSTRALIA

(1800 Minova) 1800 646 682
(1300 Minova) 1300 646 682
+61 2 4939 5159 (international)
Email: sales_au@minovaglobal.com

Sales & Logistics

Split Set Mining Systems
99-105 McDowell Street
Welshpool WA 6106 AUSTRALIA

Phone: +61 (0) 8 9458 1188
Email: mining@phoenixmetal.com.au
Customer Orders Email:
orders.desk@phoenixmetal.com.au

DISCLAIMER

All information contained in this document is provided for informational purposes only and is subject to change without notice. Since Minova and SSMS cannot anticipate or control the conditions under which this information and its products may be used, each user should review the information in the specific context of the intended application. To the maximum extent permitted by law, Minova and SSMS specifically disclaims all warranties express or implied in law, including accuracy, non-infringement, and implied warranties of merchantability or fitness for a particular purpose. Minova and SSMS specifically disclaims, and will not be responsible for, any liability or damages resulting from the use or reliance upon the information in this document.

The Minova Logo is a registered trademark.

© 2018 Minova Australia Pty Ltd

® Registered trademark of Minova International Limited